Wi-Tek
Communication Solution

WI-CPE513P-KIT / WI-CPE111-KIT

Wireless CPE for CCTV
Quick Install Guide

www.wireless-tek.com

Package content

WI-CPE513P-KIT

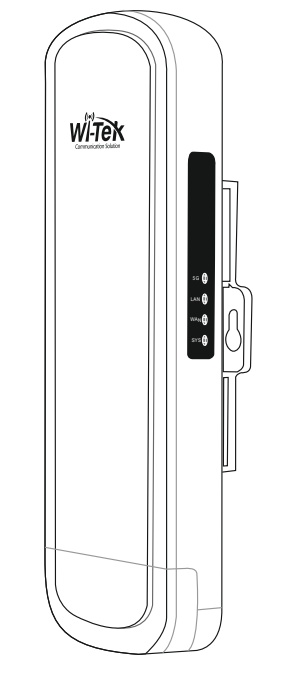
X2

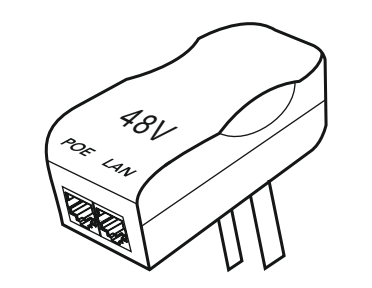

X2

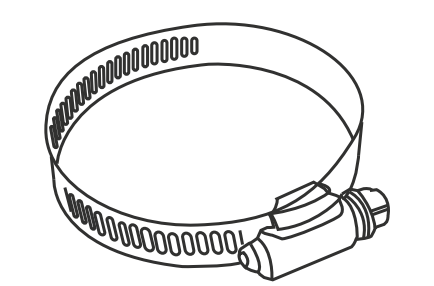
X2

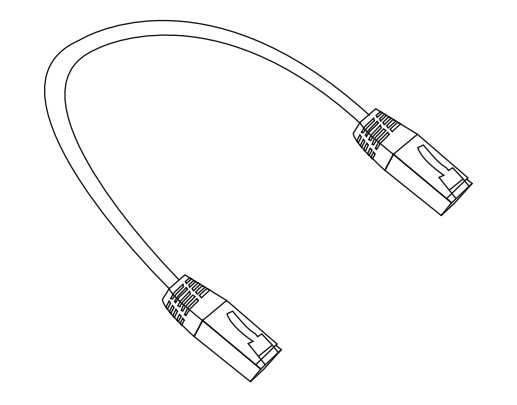
X2

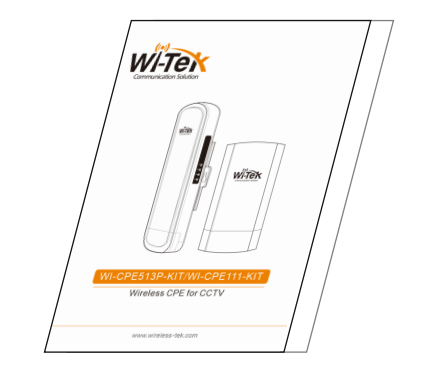
X2

Package content

WI-CPE111-KIT

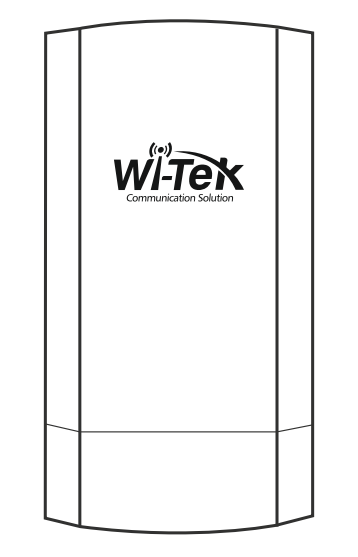
X2

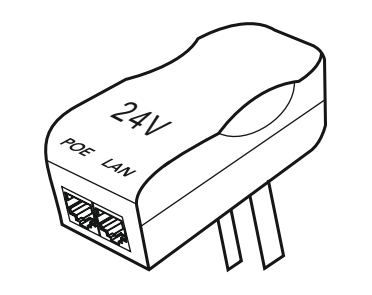

X2

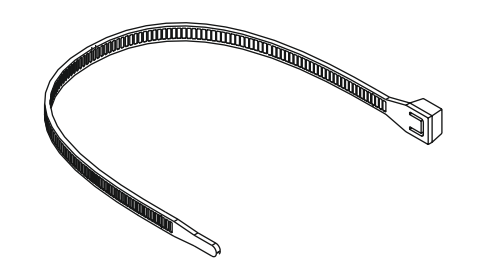
X2

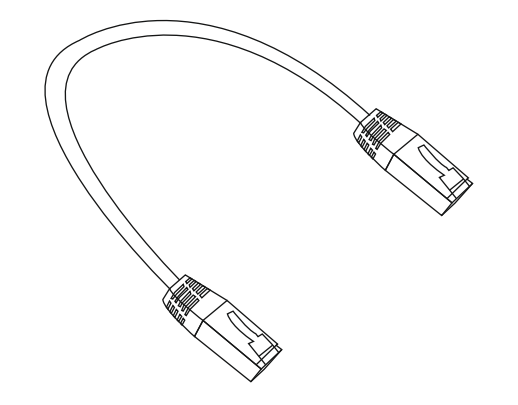
X2

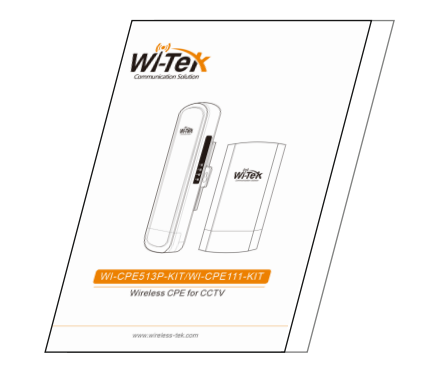
X2

Hardware Overview

WI-CPE513P-KIT


SYS
WAN
LAN
5G

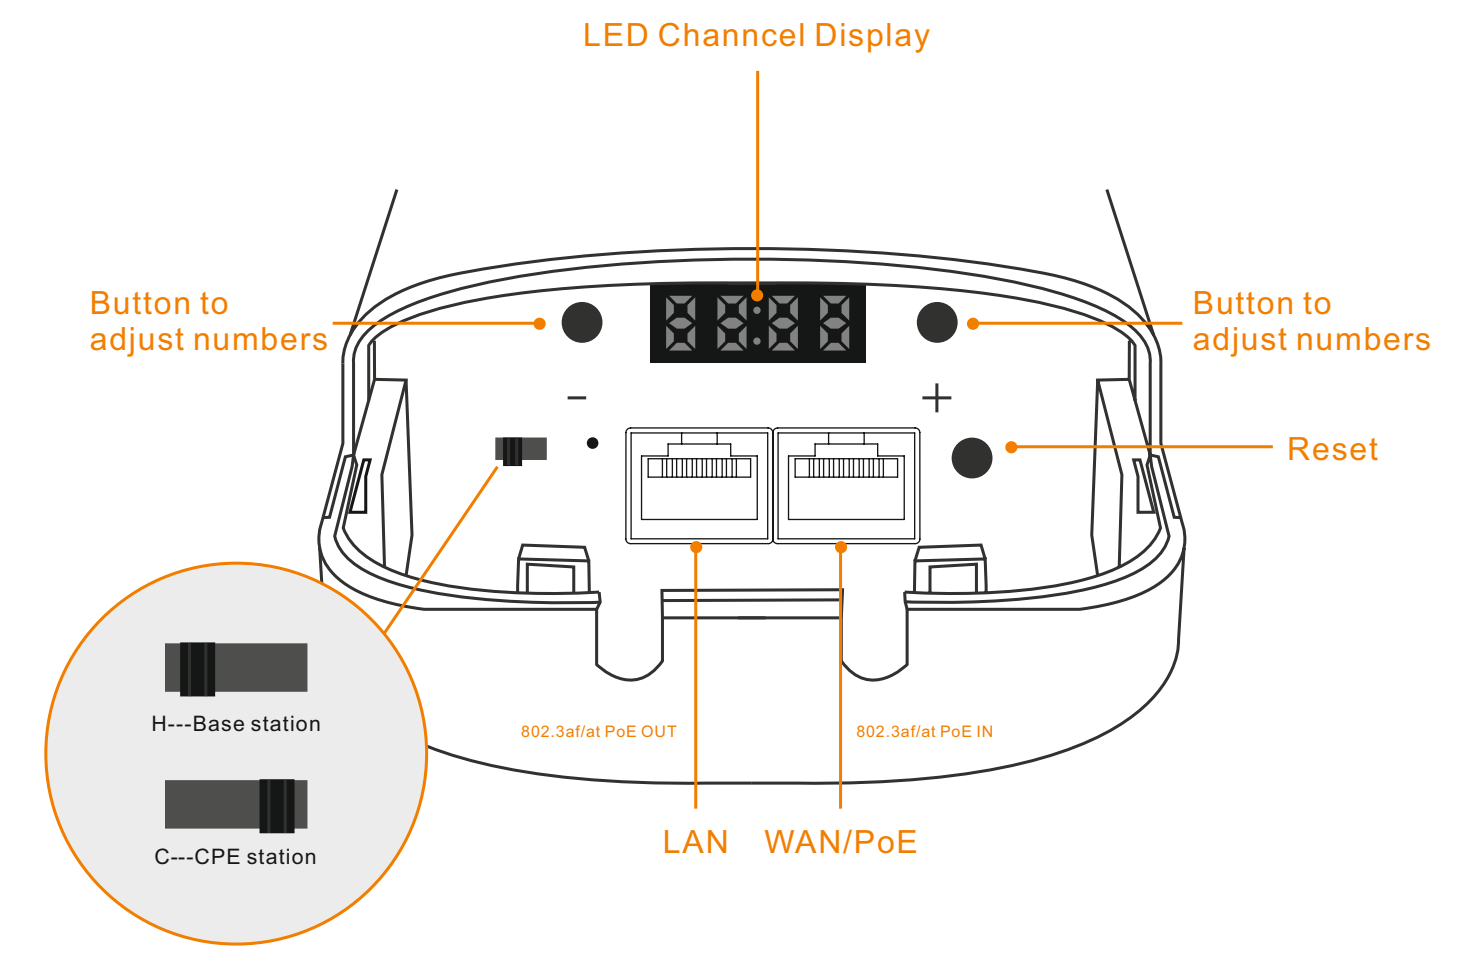
LED Channcel Display
Button to adjust numbers
Button to adjust numbers
-
+
Reset
H---Base station
C---CPE station
802.3af/at PoE OUT
802.3af/at PoE IN
LAN
WAN/PoE

Action	Status Indication
5G	Off -- Pairing failed; Solid green--Paired successfully
LAN	Off -- No link; Solid green -- Link activated
WAN	Off -- No link; Solid green -- Link activated
SYS	Off -- Power off; Solid green -- working

WI-CPE111-KIT

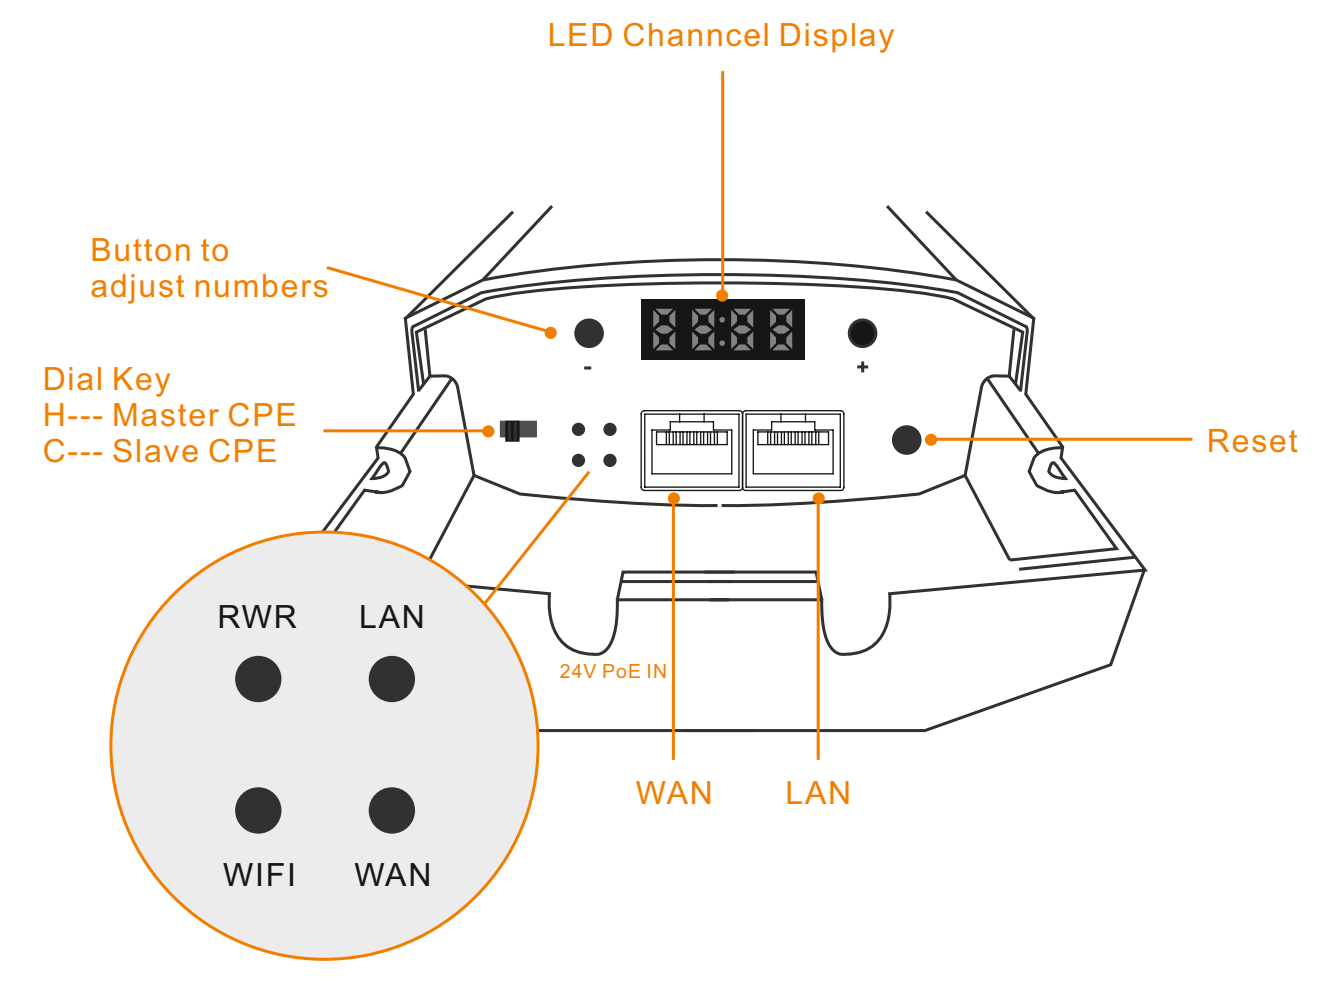
LED Channcel Display
Button to adjust numbers
Dial Key
H--- Master CPE
C--- Slave CPE
-
+
Reset
RWR
LAN
WIFI
WAN
24V PoE IN
WAN
LAN

Action	Status Indication
WIFI	Off -- Pairing failed; Solid green--Paired successfully
LAN	Off -- No link; Solid green -- Link activated
WAN	Off -- No link; Solid green -- Link activated
SYS	Off -- Power off; Solid green -- working

Mounting

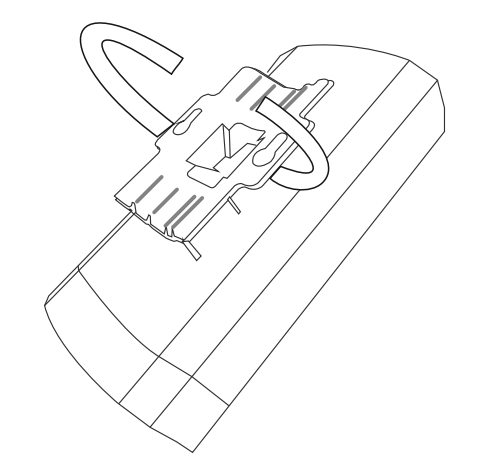

①Insert ribbon at the backside bracket hole. Adjust it according to the pole size and installation position

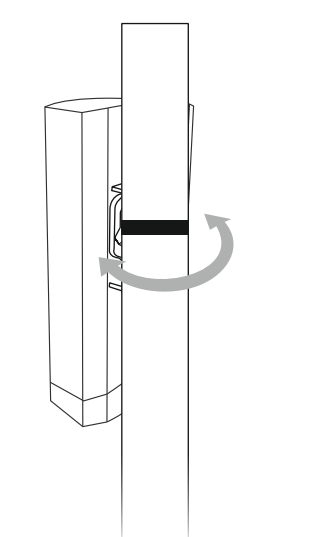

②Install the device on the pole and tighten the ribbon.

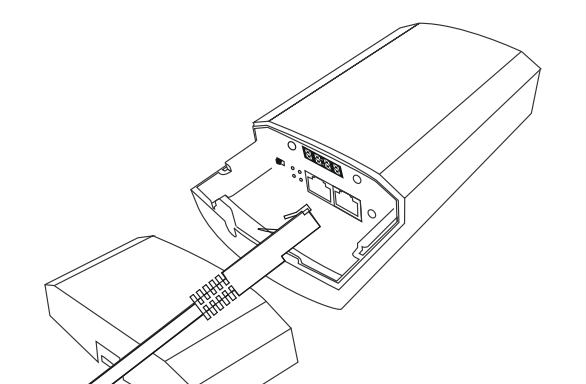

③Hold on the buckle to take down the device back cover. Insert the net cable into the network port, then fasten the back cover.

Network application

WI-CPE513P-KIT V3

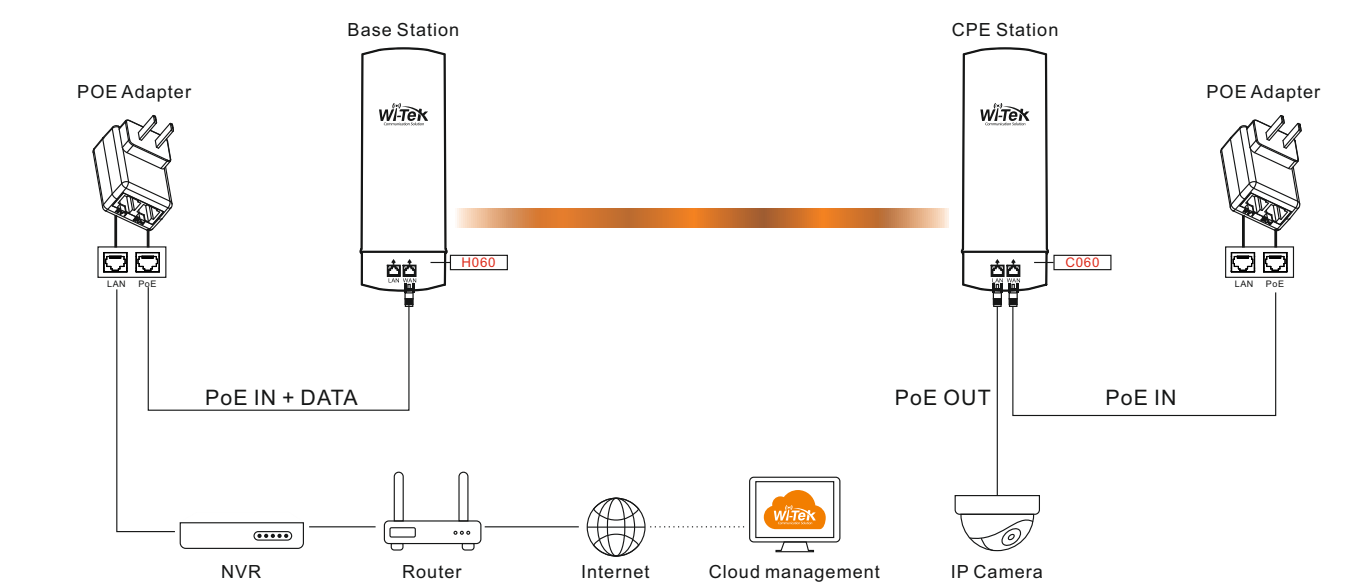
POE Adapter
Base Station
CPE Station
POE Adapter
H060
C060
PoE IN + DATA
PoE OUT
PoE IN
NVR
Router
Internet
Cloud management
IP Camera

WI-CPE111-KIT V2

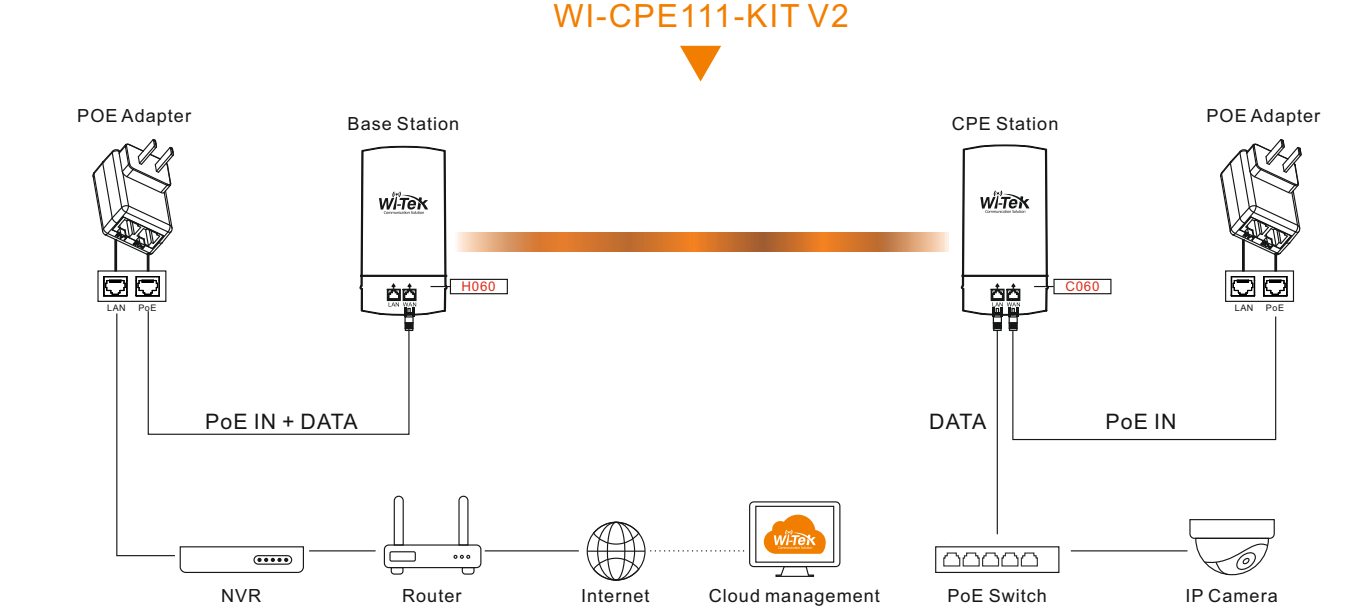
POE Adapter
Base Station
CPE Station
POE Adapter
H060
C060
PoE IN + DATA
DATA
PoE IN
NVR
Router
Internet
Cloud management
PoE Switch
IP Camera

Configuration steps

1. Set one device to Basic Station, and Another to CPE.


AP
CPE
AP
CPE

2. Set same number: select the devices, Long press on-in 3S, the LED Channel Display is flashing red, and then adjust the number. (Press "+"or "-" button to change the number)


H060
H---Base station
C060
C---CPE station

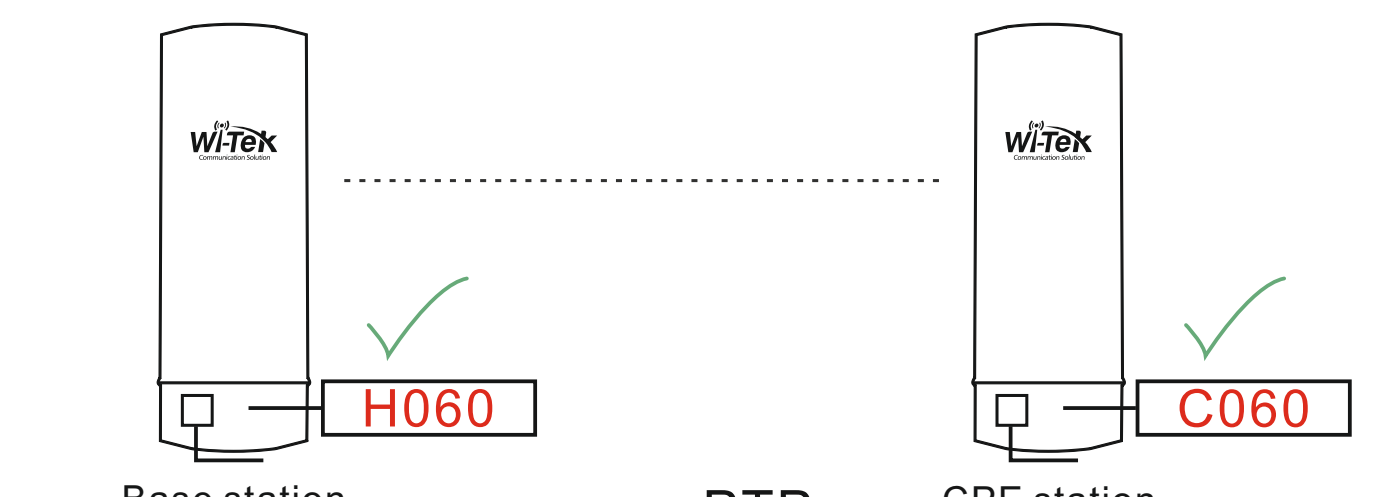
H060
C060
Base station
PTP
CPE station

OR

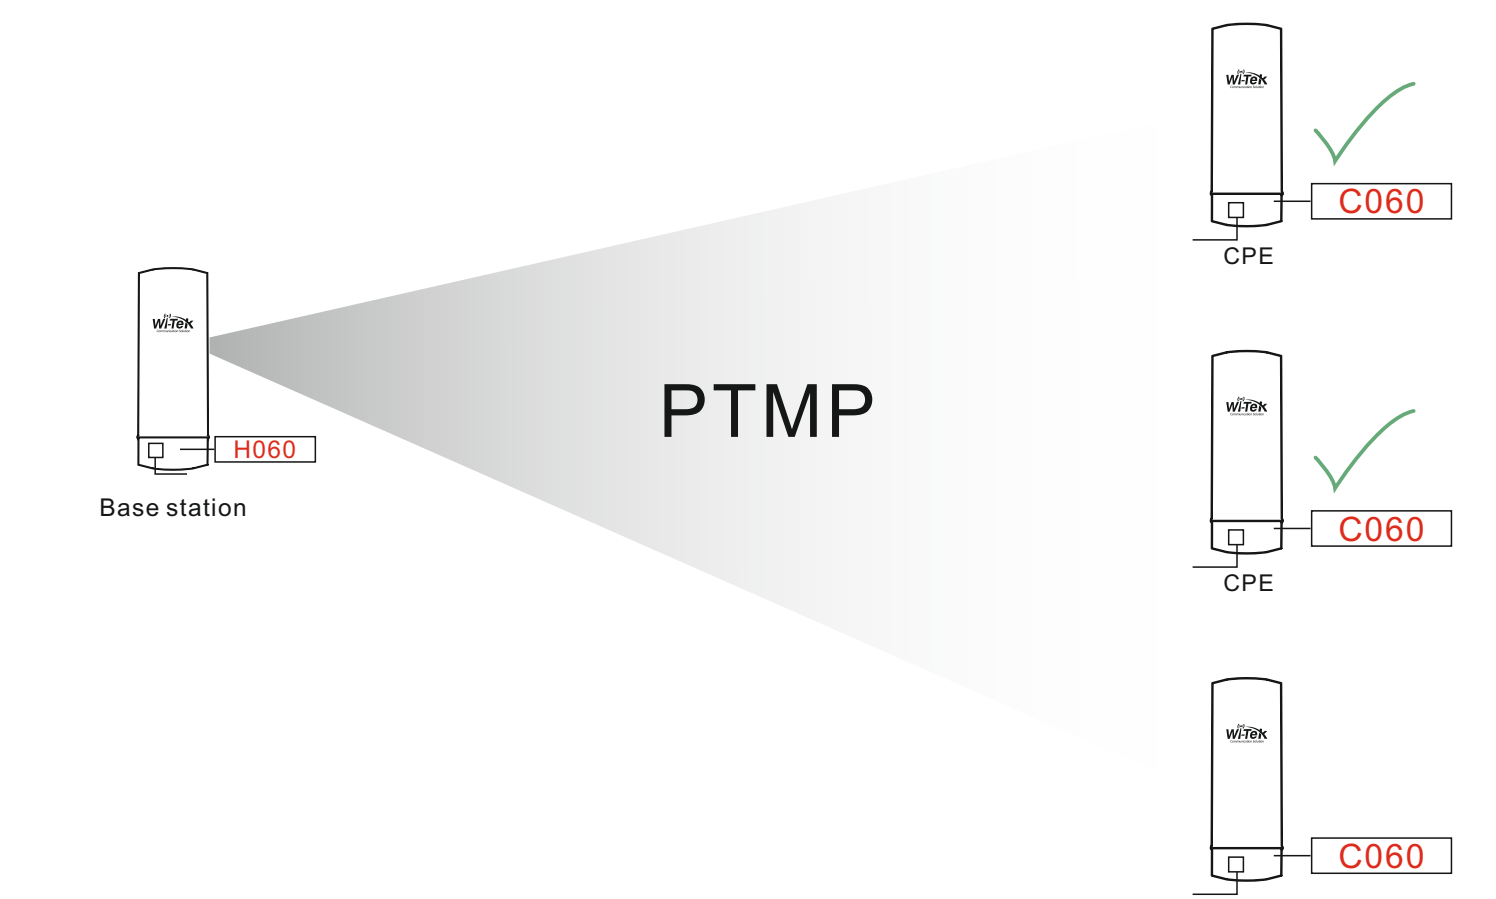
H060
Base station
PTMP
C060
CPE
C060
CPE
C060
CPE

Cloud Management Setting(Optional)

Step 1: Enter http://cloud2.wireless-tek.com, Register and log in Wi-Tek Cloud by email.

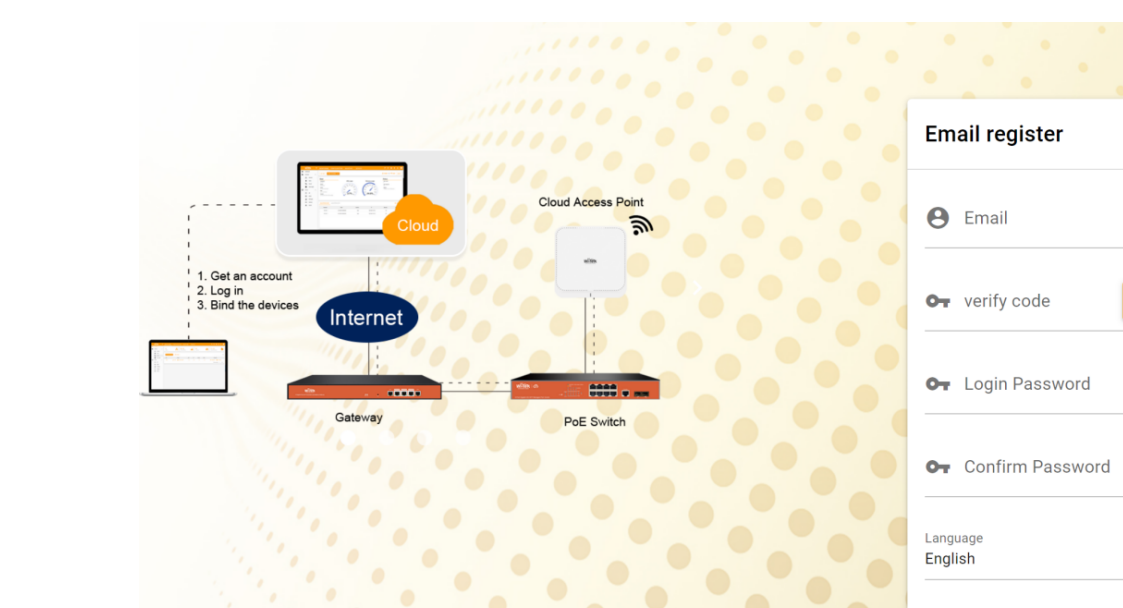
1. Get an account
2. Log in
3. Bind the devices
Internet
Cloud
Cloud Access Point
Gateway
PoE Switch
Email register
Email
verify code
GET VERIFY CODE
Login Password
Confirm Password
Language
English
LOGIN
REGISTER

Step 2: Go to Dashboard >ADD NETWORK



Step 3: Fill in the device info and **SAVE**.
(Note: A good name and exact location info can help you maintain devices easily)



Step 4: Then Click Next



Step 5: Fill in the Basic Station serial number (The 17-digit SN code is shown on the label of the device back), ADD and FINISHED, you can see the green label -- Add Success.



Step 6: Go to **Device >CPE**, click **REFRESH**, and you can see the device status.



Step 7: Click **ADD DEVICE**, in the CPE serial number (The 17-digit SN code is shown on the label of the device back), ADD and SAVE.



Step 8: Finally, click **REFRESH**, and you can see the two device are connected.



How to find the IP address of the device

1. Hook computer up to the LAN port of CPE, keep IP address on the same segment.

2. Use the AP Tools to scan device IP

(Download link https://drive.google.com/file/d/17WYydRjLMNS5NsEWEsOtMzHUsvmRU3q_/view?usp=sharing)



Warranty Card

Username	
Address	
Telephone No.	
Purchase Shop	
Purchase Address	
Product Model No.	
Purchase Time	
Serial No.	
Dealer Signature	

- **If the product defects within three months after purchase, we will provide you a new product of the same model.**
- **If the product defects within the three-year warranty period, we will provide the professional maintenance service.**
- **Proof of purchase and a complete product serial number are required to receive any services guaranteed as part of the limited warranty.**
- **Any other defects that are not caused by workmanship or product quality, such as natural disaster, water damage, extreme thermal or environmental conditions. sticker damaged, warranty card losing will disqualify the product from limited warranty.**

Technical Support
Cloud Management
Company Website

Wireless-Tek Technology Limited
Address: Room 402 4F, BiaoFan Technology Building, Bao'An Avenue, FuYong Town, Bao'An district, ShenZhen
Website:www.wireless-tek.com
Tel:86-0755-32811290
Email:sales@wireless-tek.com
Technical Support:tech@wireless-tek.com